





MODEL #	DIM "A"
3712-1/3712-TZ-1	6-1/2" [165]
3712-1-SSN/3712-TZ-1-SSN	4" [102]

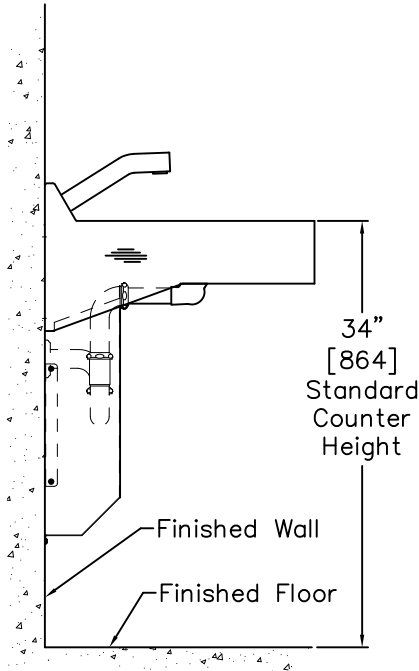

SIDE VIEW

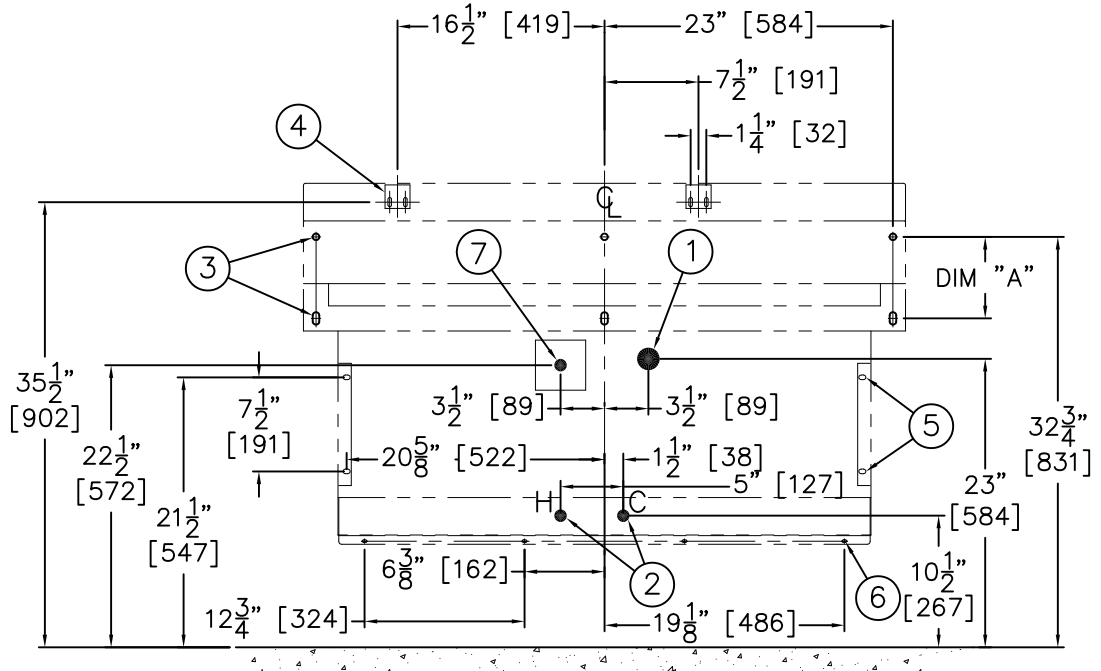

FRONT VIEW

ROUGH-IN FOR THE FOLLOWING:

- 1- LAVY WASTE OUTLET - 1-1/2" O.D. TUBE FOR COMPRESSION JOINT.
- 2- MIXING VALVE INLET - 1/2" NPS HOT AND COLD VALVE SUPPLIES.
- 3- MOUNTING LOCATIONS - 9/16" DIAMETER MOUNTING HOLES (3) PLACES, 9/16" x 1-1/8" SLOTS (3) PLACES.
- 4- BACKSPLASH MOUNTING - (2) "S" TYPE MOUNTING CLIPS. CLIPS HAVE (2) 9/32" x 3/4" SLOTS FOR FASTENERS.
- 5- TRAP COVER MOUNTING - (2) MOUNTING BRACKETS. EACH BRACKET HAS (2) 3/8" x 9/16" SLOTS FOR FASTENERS.
- 6- TRAP ENCLOSURE FLANGE MOUNTING - 9/32" x 3/8" SLOTS (4) PLACES.
- 7- FOR -SO SENSOR OPERATED CONTROLS. PROVIDE 120V/60Hz/3 AMPS (MAX.) ELECTRIC RECEPTACLE TO CONNECT FACTORY SUPPLIED 120 VAC TO 9VDC 100 mA PLUG-IN TRANSFORMER. NOTE: RECEPTACLE MUST BE WIRED TO A GFI PROTECTED CIRCUIT. FIXTURE MUST BE EARTH GROUNDED PER N.E.C. (NATIONAL ELECTRICAL CODE).

NOTE: THESE INSTRUCTIONS ARE NOT INTENDED FOR INSTALLATION OF UNITS WITH SUFFIX OPTION - EB (ENCLOSED BOTTOM).

INSTALLATION INSTRUCTIONS:

SOME AVAILABLE OPTIONS FOR THIS UNIT MAY ALTER THESE ROUGH-IN INSTRUCTIONS. CONTACT FACTORY FOR DETAILS. UNIT IS INTENDED FOR INSTALLATION ON A FINISHED WALL WITH APPROPRIATE WALL BACKING. WALL ANCHORS

AND MOUNTING HARDWARE ARE NOT INCLUDED. UNIT INCLUDES WASTE PIPING AND 1-1/2" TUBULAR P-TRAP. VALVE ASSEMBLY IS SHIPPED LOOSE FOR MOUNTING TO WALL. INCLUDES VALVE AND TRAP ENCLOSURE, SHIPPED LOOSE.



ACORN ENGINEERING COMPANY
P.O. BOX 3527 Industry, CA 91744
15125 Proctor Ave Industry, CA 91746
(626) 336-4561 FAX (626) 961-2200

TITLE

MULTILINEAR STAINLESS STEEL ROUGH-IN MODELS # 3712-1 / 3712-1-TZ & -SSN

MANUFACTURE DATE

DECEMBER 1997**TO PRESENT**

DATE ISSUED



12/18/97

DATE REVISED

02/25/13 C

DRAWING NUMBER

9927-046-001

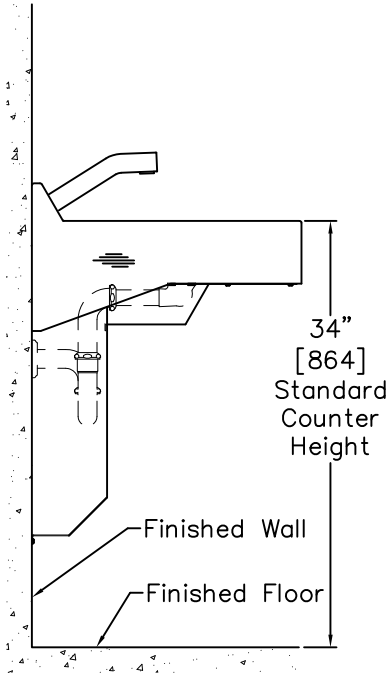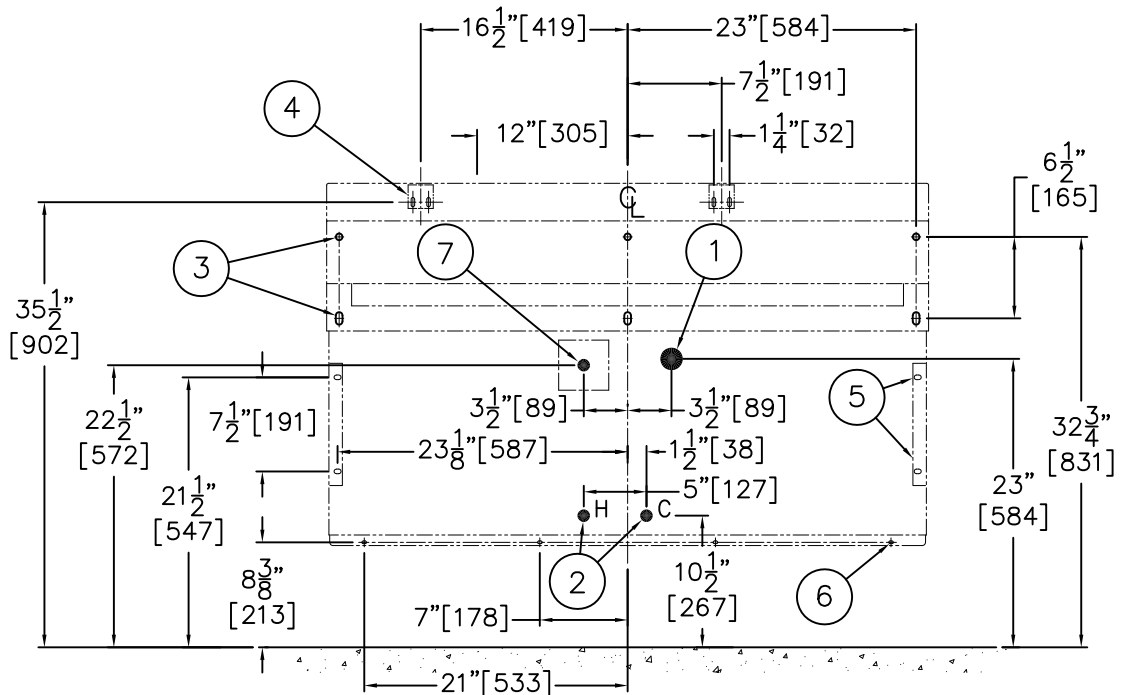**SIDE VIEW****FRONT VIEW****ROUGH-IN FOR THE FOLLOWING:**

- 1- LAVY WASTE OUTLET – 1-1/2" O.D. TUBE FOR COMPRESSION JOINT.
- 2- MIXING VALVE INLET – 1/2" NPS HOT AND COLD VALVE SUPPLIES.
- 3- MOUNTING LOCATIONS – 9/16" DIAMETER MOUNTING HOLES (3) PLACES, 9/16" x 1-1/8" SLOTS (3) PLACES.
- 4- BACKSPLASH MOUNTING – (2) "S" TYPE MOUNTING CLIPS. CLIPS HAVE (2) 9/32" x 3/4" SLOTS FOR FASTENERS.
- 5- TRAP COVER MOUNTING – (2) MOUNTING BRACKETS. EACH BRACKET HAS (2) 3/8" x 9/16" SLOTS FOR FASTENERS.
- 6- TRAP ENCLOSURE FLANGE MOUNTING – 9/32" x 3/8" SLOTS (4) PLACES.
- 7- FOR -SO SENSOR OPERATED CONTROLS. PROVIDE 120V/60Hz/3 AMPS(MAX.) ELECTRIC RECEPTACLE TO CONNECT FACTORY SUPPLIED 120 VAC TO 9VDC 100 mA PLUG-IN TRANSFORMER. NOTE: RECEPTACLE MUST BE WIRED TO A GFI PROTECTED CIRCUIT. FIXTURE MUST BE EARTH GROUNDED PER N.E.C. (NATIONAL ELECTRICAL CODE).

INSTALLATION INSTRUCTIONS:

SOME AVAILABLE OPTIONS FOR THIS UNIT MAY ALTER THESE ROUGH-IN INSTRUCTIONS. CONTACT FACTORY FOR DETAILS. UNIT IS INTENDED FOR INSTALLATION ON A FINISHED WALL WITH APPROPRIATE WALL BACKING. 3/8" UNC WALL

ANCHORS AND MOUNTING HARDWARE ARE NOT INCLUDED. UNIT INCLUDES WASTE PIPING AND 1-1/2" TUBULAR P-TRAP. VALVE ASSEMBLY IS SHIPPED LOOSE FOR MOUNTING TO WALL. INCLUDES VALVE AND TRAP ENCLOSURE, SHIPPED LOOSE.



ACORN ENGINEERING COMPANY
P.O. BOX 3527 Industry, CA 91744
15125 Proctor Ave Industry, CA 91746
(626) 336-4561 FAX (626) 961-2200

TITLE

MULTILINEAR SS ROUGH-IN MODELS * 3712-1-EB/3712-1-TZ-EB (ENCLOSED BOTTOM)

MANUFACTURE DATE

DECEMBER 1997**TO PRESENT**

DATE ISSUED


12/31/97

DATE REVISED

02/25/13 B

DRAWING NUMBER

9927-048-001

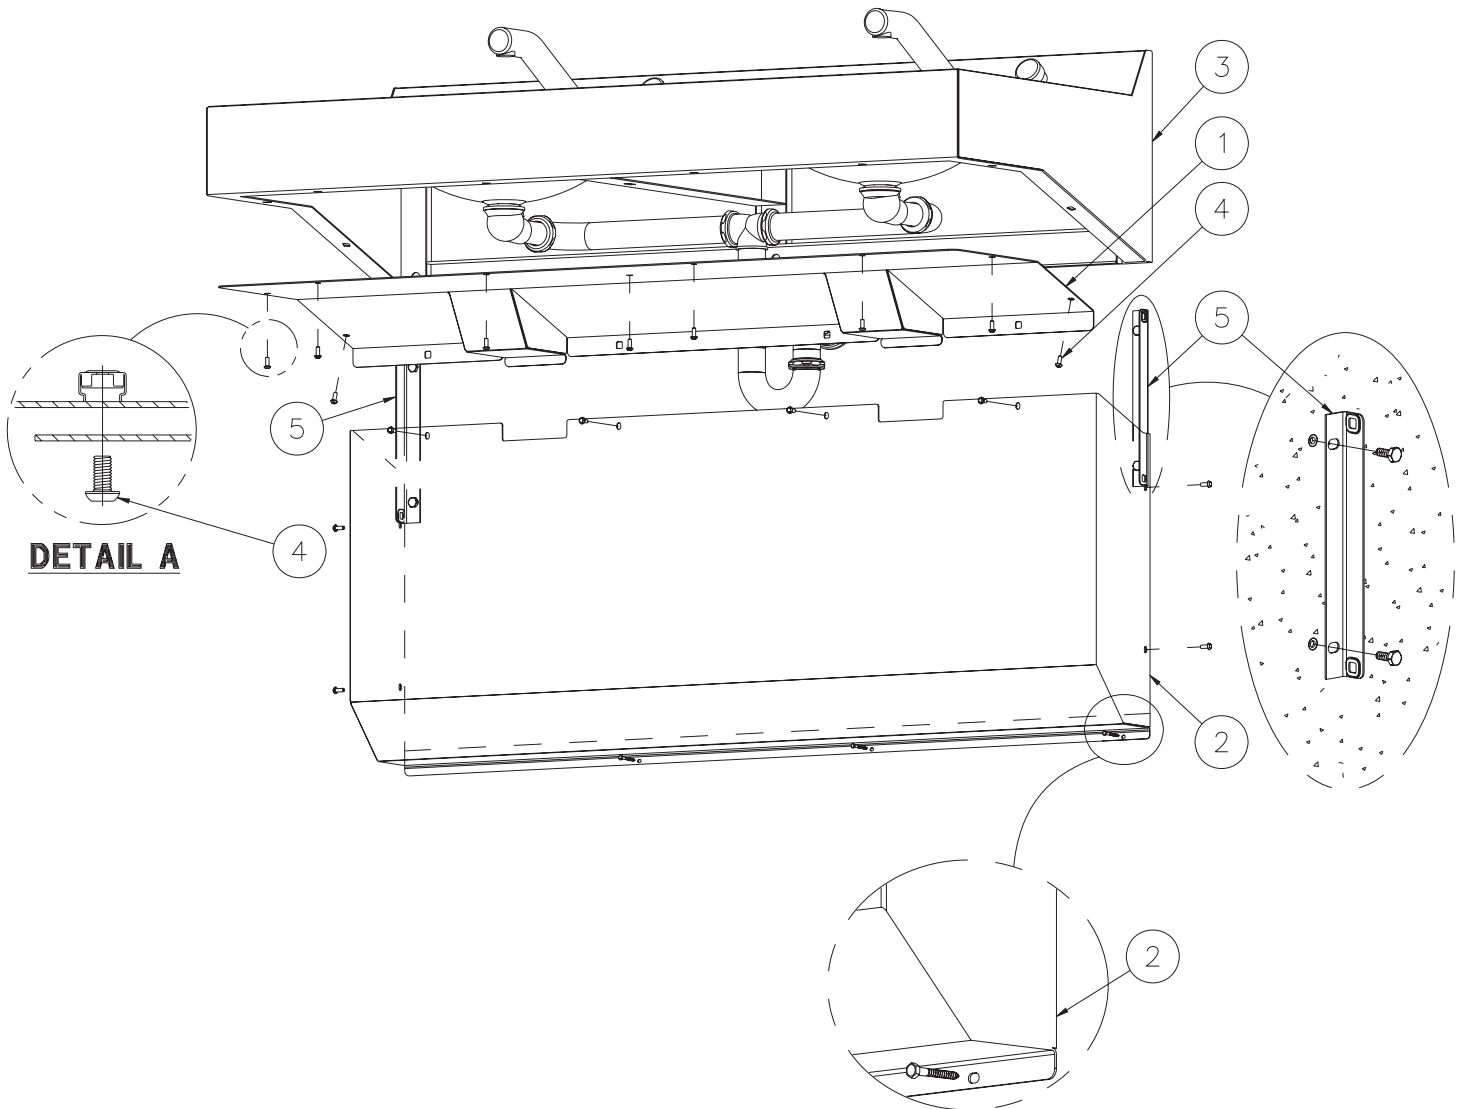


INSTALLATION INSTRUCTIONS:

- A- REMOVE BOTTOM COVER (1) AND TRAP ENCLOSURE (2) FROM WASHBASIN (3) BY REMOVING BUTTON HEAD SCREWS (4). SEE DETAIL A.
- B- REFERENCE APPROPRIATE ROUGH-IN SHEET FOR WASHBASIN ANCHORING LOCATIONS. REFERENCE DRAWING #9927-125-001 FOR FIXTURE ASSEMBLY AND INSTALLATION DETAILS.
- C- LOCATE AND SECURE BRACKETS (5) TO WALL, USING INSTALLER PROVIDED ANCHORING HARDWARE. WALL ANCHORS AND ANCHORING HARDWARE ARE BY OTHERS.
- D- REASSEMBLE BOTTOM COVER (1) TO WASHBASIN (3).
- E- ASSEMBLE TRAP ENCLOSURE (2) TO BOTTOM COVER (1) AND SECURE TO WASHBASIN (3). SECURE TRAP ENCLOSURE (2) TO WALL ANCHORED BRACKETS (5) AND ANCHOR TO WALL AT LOWER ENCLOSURE ANCHORING POINTS USING INSTALLER PROVIDED FASTENERS.






P.O. BOX 3527 INDUSTRY, CA. 91744
(626) 336-4561 FAX (626) 961-2200

TITLE ENCLOSED BOTTOM ASSEMBLY CAT# 3711/3712/3713/3714-1-EB		
MANUFACTURE DATE AUGUST 1997 TO PRESENT	DATE ISSUED 11/20/97	DRAWING NUMBER 9927-130-001
	DATE REVISED 02/12/08	

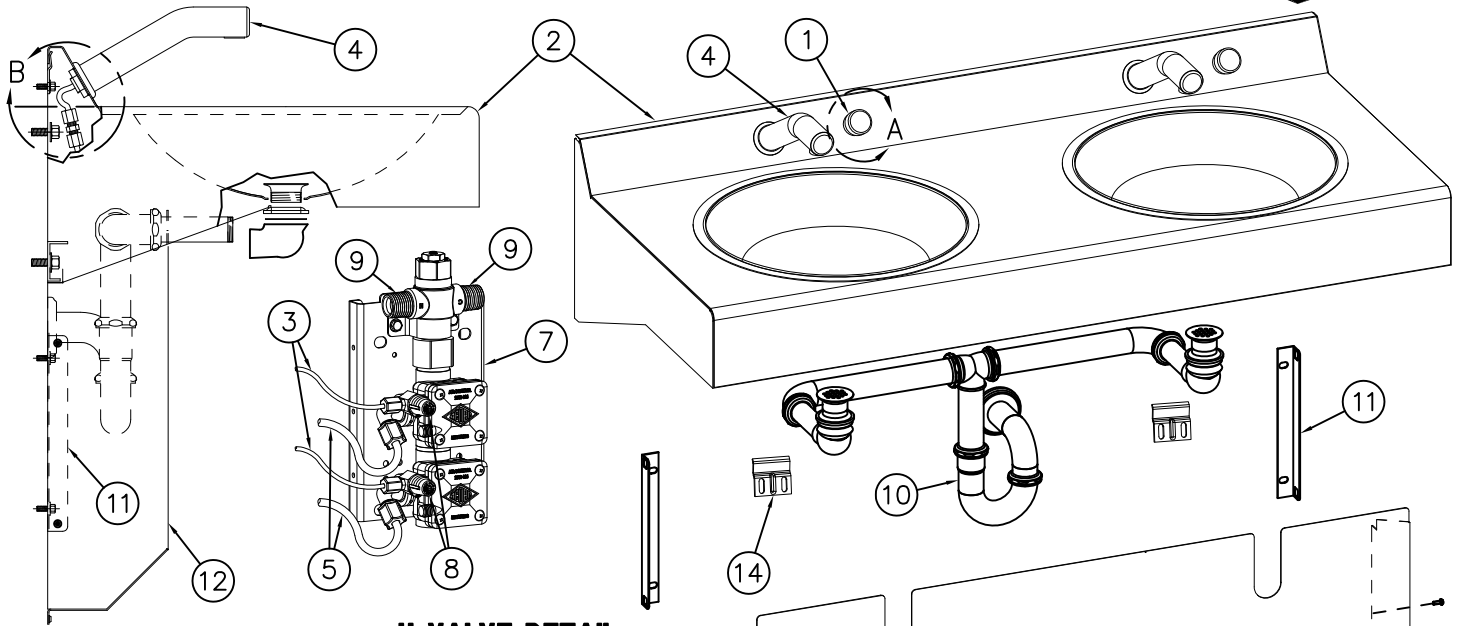**-H VALVE DETAIL****REFERENCE DRAWINGS**

SPOUT INSTALLATION	9927-200-001
-SO SENSOR OP. INSTALLATION	9927-221-005
-H PUSHBUTTON PARTS	9957-700-001
-H VALVE MAINTENANCE	9940-005-002
-H SERVOMOTOR	9955-000-002
CHECKSTOP/STRAINER	9956-040-003
ROUND BOWL WASTE PIPING	9985-350-001
TRAP. BOWL WASTE PIPING	9985-352-001
MISCELLANEOUS HARDWARE	9951-005-001
MXTP VALVE TEMP. ADJUST.	9912-252-002
OPTIONAL -PDM SOAP DISPENSER	9927-210-003

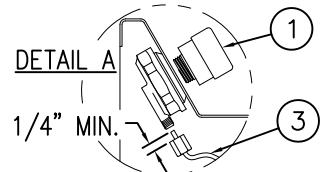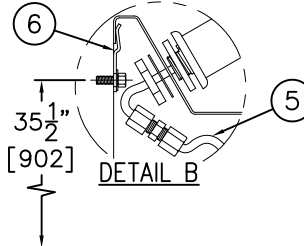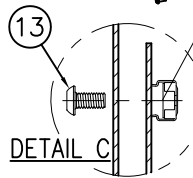**-H PUSHBUTTON DETAIL****INSTALLATION INSTRUCTIONS:**

NOTE: SOME AVAILABLE OPTIONS MAY AFFECT INSTALLATION. REFER TO ALL INSTALLATION SHEETS FOR SPECIFIED OPTIONS BEFORE PROCEEDING.

- A- PROVIDE REQUIRED WALL BACKING AND ROUGH-INS AS SPECIFIED ON APPROPRIATE ROUGH-IN DRAWING.
- B- FOR -H HAND OPERATED UNITS, ASSEMBLE PUSHBUTTONS (1) TO WASHBASIN (2). CONNECT POLYETHYLENE 1/8" O.D. AIR LINES (3) TO PUSHBUTTONS BY HAND TIGHTENING FERRULE NUTS PROVIDED. SEE DETAIL A.
- C- ASSEMBLE WATER SPOUTS (4) TO WASHBASIN (2). CONNECT POLYETHYLENE 1/4" O.D. WATER LINES (5) TO SPOUTS WATER-TIGHT WITH FERRULE NUTS PROVIDED. SEE DETAIL B.
- D- MOUNT S-CLIPS (6) TO THE WALL AT 35-1/2" ABOVE FINISHED FLOOR. SEE DETAIL B. INSTALL WASHBASIN (2) ENGAGING THE BACKSPASH OVER S-CLIPS. ANCHOR WASHBASIN (2) TO WALL (FASTENERS AND WALL ANCHORS BY OTHERS).
- E- FOR -H HAND OPERATED UNITS, INSTALL AIR-CONTROL VALVE ASSY. (7) (MOUNTING HARDWARE BY OTHERS) ON WALL WITHIN TRAP ENCLOSURE AREA. REFERENCE STEP K. CONNECT 1/8" O.D. AIR LINES (3) FROM PUSHBUTTONS (1) TO VALVE TIMERS (8) HAND TIGHT USING FERRULE NUTS PROVIDED. SEE DETAIL A.
- F- FOR -SO SENSOR OPERATED UNITS, MAKE REFERENCE TO THE APPROPRIATE DRAWING FOR INSTALLATION OF THE SOLENOID VALVE AND ELECTRICAL CONNECTIONS.

- G- CONNECT 1/4" O.D. WATERLINES (5) FROM SPOUTS (4) TO VALVE ASSEMBLY (7) WATER-TIGHT WITH FERRULE NUTS PROVIDED.
- H- AFTER THOROUGHLY FLUSHING SUPPLY LINES, MAKE UP CONNECTIONS FROM 1/2" NPTE VALVE INLETS (9) TO SUPPLY STUB OUTS. CONNECTOR HOSES AND SUPPLY STUB OUTS PROVIDED BY THE INSTALLER.
- I- NOTE: ALL WASTE PIPING AND CONNECTIONS TO WALL ARE FACTORY PROVIDED. ASSEMBLE WASTE PIPING (10) AND MAKE-UP THE LAVY WASTE CONNECTION (1-1/2" O.D. COMPRESSION). SEE THE APPROPRIATE REFERENCE DRAWING FOR PARTS.
- J- TURN ON WATER SUPPLY. CHECK FOR LEAKS. ON -H VALVE (7) ADJUST TIMERS (8) TO GET DESIRED WATER CYCLE LENGTH.
- K- MOUNT TRAP ENCLOSURE BRACKETS (11) TO WALL (FASTENERS AND ANCHORS BY OTHERS). ASSEMBLE TRAP ENCLOSURE (12) TO BRACKETS (11) WITH SCREWS (13) PROVIDED. SEE DETAIL C. ALSO USE S-CLIPS (14) TO MOUNT ENCLOSURE (12) TO WALL AT RETURN (WALL ANCHORS BY OTHERS). SEE DETAIL D. NOTE: THIS STEP NOT DONE IF OPTION -LE LESS TRAP ENCLOSURE SPECIFIED.



ACORN ENGINEERING COMPANY
P.O. BOX 3527 Industry, CA 91744
15125 Proctor Ave Industry, CA 91746
(626) 336-4561 FAX (626) 961-2200

TITLE

STRAIGHT FRONT WASHBASIN - CAT. #3711/3712/3713/3714 -1

MANUFACTURE DATE

AUGUST 1997
TO PRESENT

DATE ISSUED

9/22/97

DATE REVISED

03/25/14 F




DRAWING NUMBER

9927-125-001



REFERENCE DRAWINGS

REPAIR PARTS	DRAWING
NON-METERING SERVOMOTOR (-F)	9955-001-003
METERING SERVOMOTOR (-H)	9955-000-003
AIR-CONTROL VALVE BODY	9975-090-001
CHECKSTOP (-ST Single Temp. Only)	9956-040-003
SENSOR/SOLENOID (-SO) (24VAC)	9955-015-002
SENSOR/SOLENOID/PPZ (-SO) (9VDC)	9955-019-002
HAND BUTTON	9957-300-001
FOOT BUTTON	9957-200-001

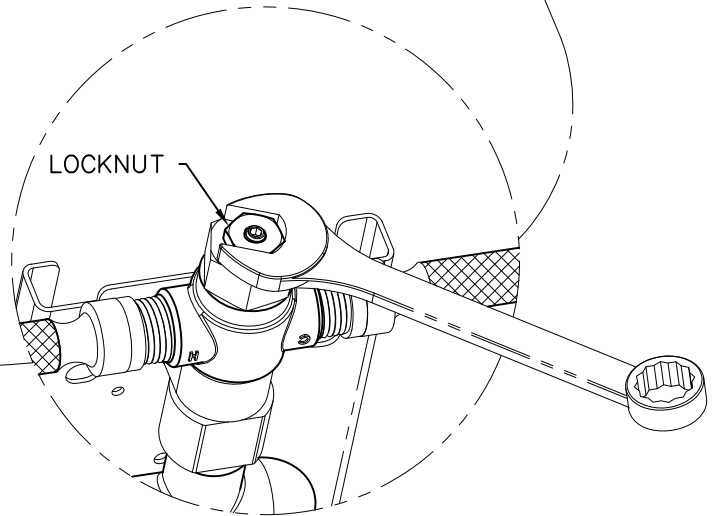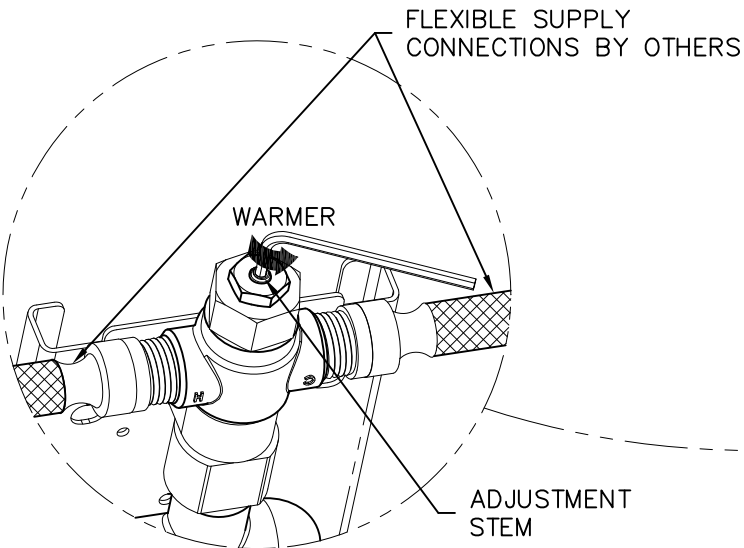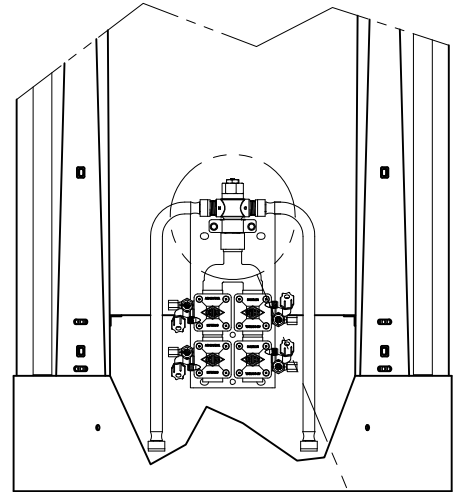

VALVE INSTALLATION:

- A- MX-T/P VALVES: AFTER THOROUGHLY FLUSHING SUPPLY LINES, MAKE UP CONNECTIONS TO SUPPLY STUB OUTS AND VALVE INLETS WITH INSTALLER PROVIDED FLEXIBLE HOSE. NOTE: MX-T/P VALVE SUPPLY INLETS ARE 1/2" NPT.
- B- OPTIONAL -ST (Single Temp): AFTER THOROUGHLY FLUSHING SUPPLY LINE, MAKE UP CONNECTION TO SUPPLY STUB OUT AND VALVE INLET WITH FLEXIBLE HOSE PROVIDED. NOTE: -ST VALVES INCLUDE FLEXIBLE HOSE WITH 1/2" NPSI CONNECTIONS. FLEXIBLE HOSE ENDS WILL ACCOMMODATE 1/2" NPT MALE ADAPTER.
- C- SEE APPROPRIATE SERVOMOTOR REFERENCE DRAWINGS FOR VALVE DETAILS AND TIMING INSTRUCTIONS.

MX T/P TEMPERATURE VALVE ADJUSTMENT

- D- LOOSEN LOCKNUT SHOWN.
- E- TURN ON FIXTURE AND RUN WATER FOR AT LEAST 2 MINUTES. ALLOW WATER TO STABILIZE.
- F- USE AN 1/8" ALLEN WRENCH TO TURN ADJUSTMENT STEM COUNTER-CLOCKWISE FOR WARMER OR CLOCKWISE FOR COOLER OUTLET WATER TEMPERATURE.
- G- TIGHTEN LOCKNUT TO PREVENT ACCIDENTAL OR UNAUTHORIZED TEMPERATURE ADJUSTMENT.
- H- RE-CHECK OUTLET TEMPERATURE.



ACORN ENGINEERING COMPANY
P.O. BOX 3527 Industry, CA 91744
15125 Proctor Ave Industry, CA 91746
(626) 336-4561 FAX (626) 961-2200

TITLE

VALVE INSTALL & MIXING VALVE ADJUSTMENT

MANUFACTURE DATE

**MARCH 2014
TO PRESENT**

DATE ISSUED

03/25/14


DATE REVISED

DRAWING NUMBER


9912-252-002




—DMJ DECK MOUNTED
"J" SPOUT SHOWN
FOR REFERENCE

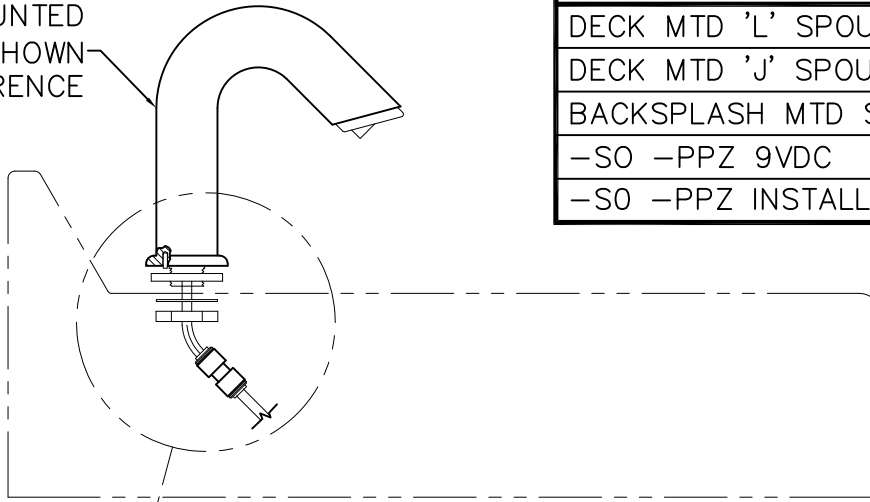

REFERENCE DRAWING	
DECK MTD 'L' SPOUT	9957-730-001
DECK MTD 'J' SPOUT	9957-731-001
BACKSPLASH MTD SPOUT	9957-732-001
—SO —PPZ 9VDC	9955-019-002
—SO —PPZ INSTALLATION	9927-221-005

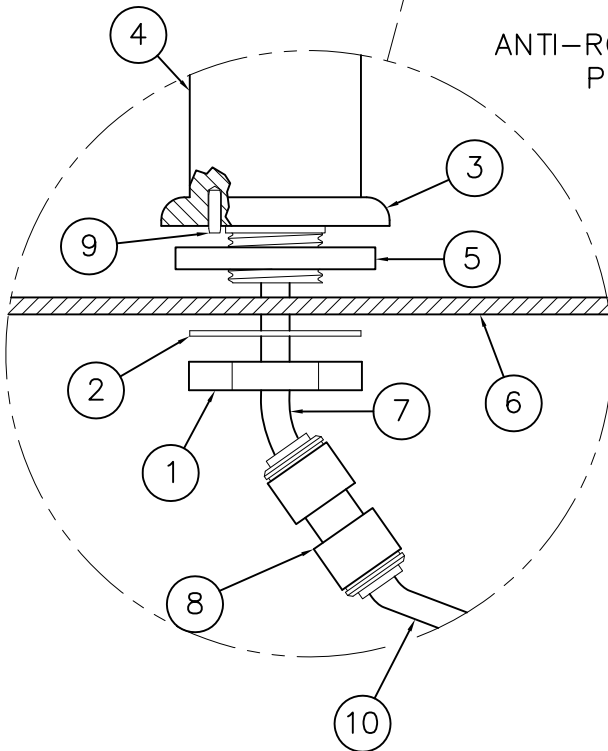


ANTI-ROTATION
PIN SLOT

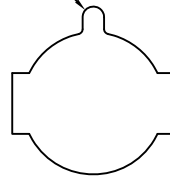

PUNCH DETAIL
STAINLESS STEEL

ANTI-ROTATION
PIN SLOT

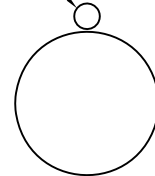

PUNCH DETAIL CORTERRA
SOLID SURFACE

INSTALLATION INSTRUCTIONS:

NOTE: INSTALL SPOUTS PRIOR TO SECURING
FIXTURE TO WALL.

- A—REMOVE BRASS NUT ① AND WASHER ② FROM THE
BASE ③ OF SPOUT ④. DO NOT REMOVE RUBBER
GASKET ⑤.
- B—FROM ABOVE DECK ⑥: MAKE SURE RUBBER GASKET
⑤ IS PROPERLY SEATED WITHIN THE BASE ③ OF
SPOUT ④. FEED TUBE ⑦ AND UNION FITTING ⑧
THRU PUNCHED OPENING. POSITION SPOUT ③ ON
DECK ⑥ WITH ANTI-ROTATION PIN ⑨ THRU DECK
PUNCHING ANTI-ROTATION SLOT.
- C—FROM BELOW DECK ⑥: REASSEMBLE BRASS NUT ①
AND WASHER ② TO THE BASE ③ OF SPOUT ④.
MAKE SURE THAT PIN ⑨ IS IN THE PUNCHING SLOT
AND THAT GASKET ⑤ SEALS PROPERLY BEFORE
TIGHTENING.
- D—CONNECT POLYETHYLENE 1/4" O.D. WATER LINE ⑩ TO
UNION FITTING ⑧ WATERTIGHT WITH THE FERRULE
NUT PROVIDED. REFER TO THE GENERAL INSTALLATION
INSTRUCTIONS FOR ADDITIONAL DETAILS.



ACORN ENGINEERING COMPANY
P.O. BOX 3527 Industry, CA 91744
15125 Proctor Ave Industry, CA 91746
(626) 336-4561 FAX (626) 961-2200

TITLE

TYPICAL SPOUT INSTALLATION DETAIL

MANUFACTURE DATE

JULY 1997

TO PRESENT

DATE ISSUED


11/26/97

DATE REVISED

03/25/14 F


DRAWING NUMBER

9927-200-001

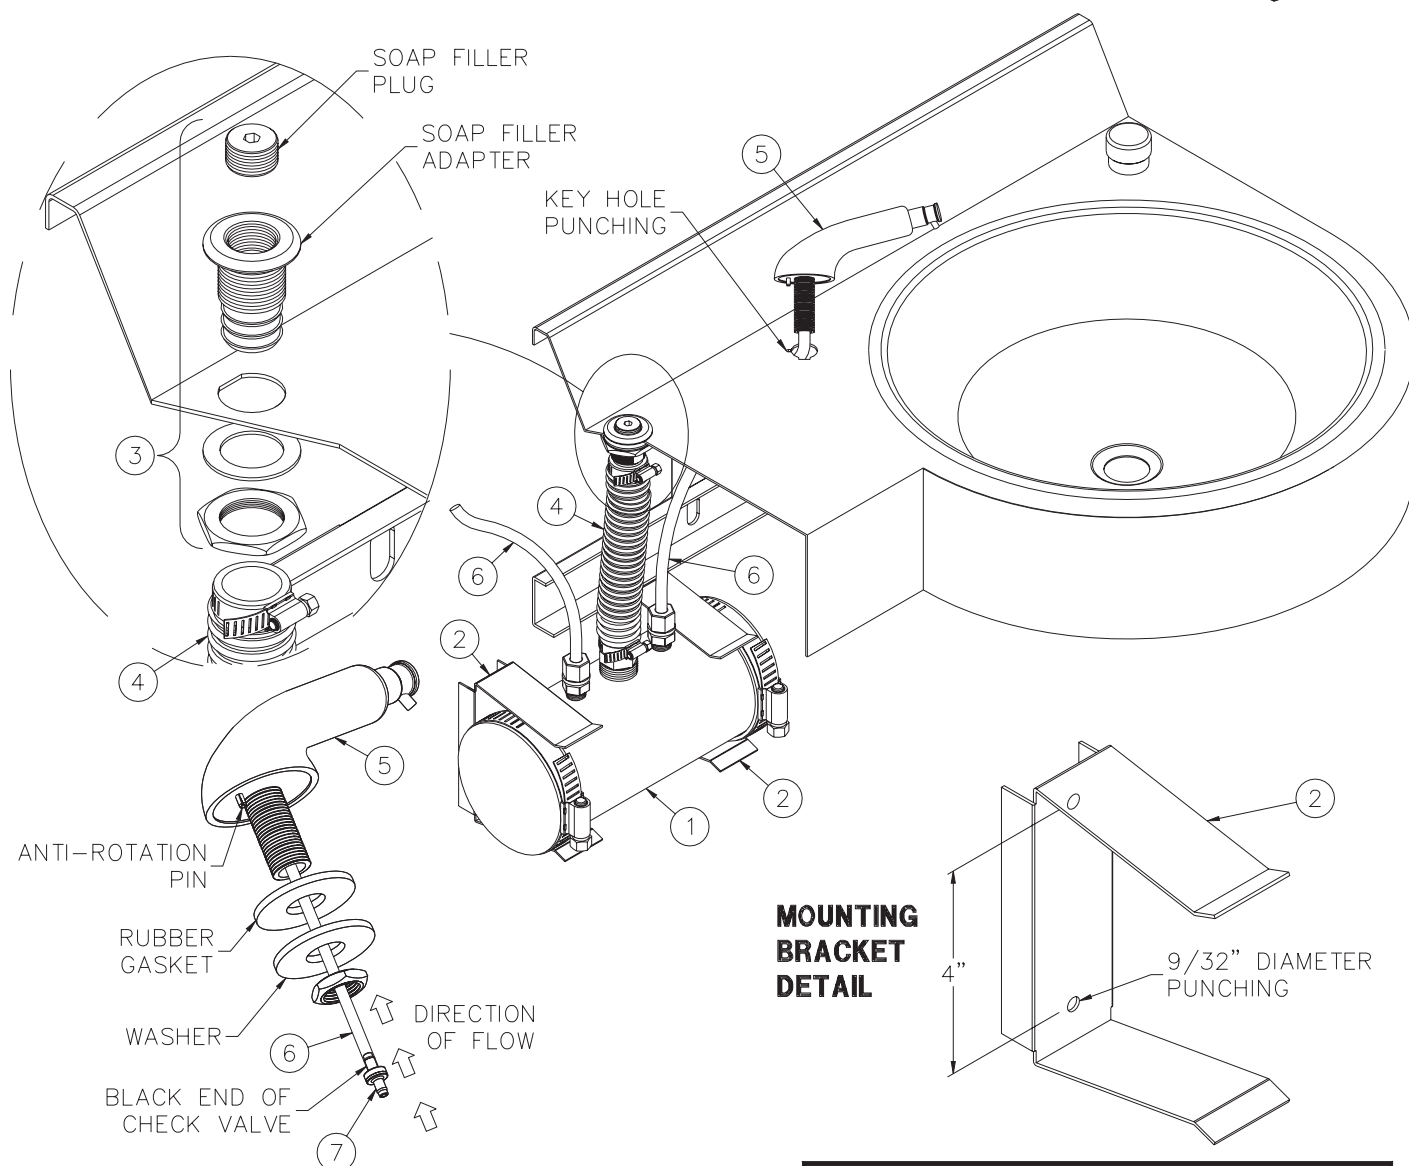

FOR BEST RESULTS INSTALL SOAP RESERVOIR FILL HOLE DIRECTLY BELOW SOAP FILLER ON DECK WITH REFILL TUBE AS SHORT AND STRAIGHT AS POSSIBLE TO FACILITATE REFILL OF SOAP WITHOUT BACKUP OR OVERFLOW.

MOUNTING BRACKET DETAIL

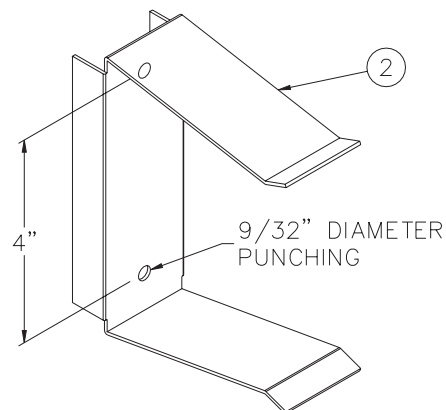

REFERENCE DRAWING

ASSEMBLY	NUMBER
SOAP DISPENSER	9965-075-002

- A- INSTALL SOAP RESERVOIR (1) TO WALL INSIDE THE TRAP ENCLOSURE USING THE MOUNTING BRACKETS (2) PROVIDED. WALL ANCHORS AND FASTENERS ARE BY OTHERS.
- B- INSTALL SOAP FILLER ASSEMBLY (3) TO DECK.
- C- ATTACH THE 1-1/4" O.D. REFILL TUBE (4) TO SOAP FILLER ASSEMBLY (3) & SOAP RESERVOIR (1) WITH THE HOSE CLAMPS PROVIDED.

- D- INSTALL SOAP DISPENSER(S) (5) ONTO DECK BY ALIGNING ANTI-ROTATION PIN WITH KEY HOLE. NOTE THAT GASKET AND WASHER ARE LOCATED BENEATH THE DECK.
- E- ATTACH THE 3/8" O.D. TUBING (6) TO THE DISPENSER(S) (5) & RESERVOIR (1). NOTE: CHECK VALVE(S) (7) MUST BE FIELD SPLICED INTO TUBING (6) & INSTALLED WITH RESPECT TO DIRECTION OF FLOW.
- F- TO FILL SOAP RESERVOIR, REMOVE THE FILLER PLUG FROM THE SOAP FILLER ADAPTER. SLOWLY POUR SOAP DOWN OPENING AND REPLACE PLUG.



ACORN ENGINEERING COMPANY
P.O. BOX 3527 INDUSTRY, CA. 91744
(626) 336-4561 FAX (626) 961-2200

TITLE

-PDM SOAP DISPENSER INSTALLATION DETAIL

MANUFACTURE DATE

JUNE 2001

TO PRESENT

DATE ISSUED

08/24/01

DATE REVISED


06/22/04

DRAWING NUMBER

9927-210-003



TWO STATION WIRING DIAGRAM SHOWN

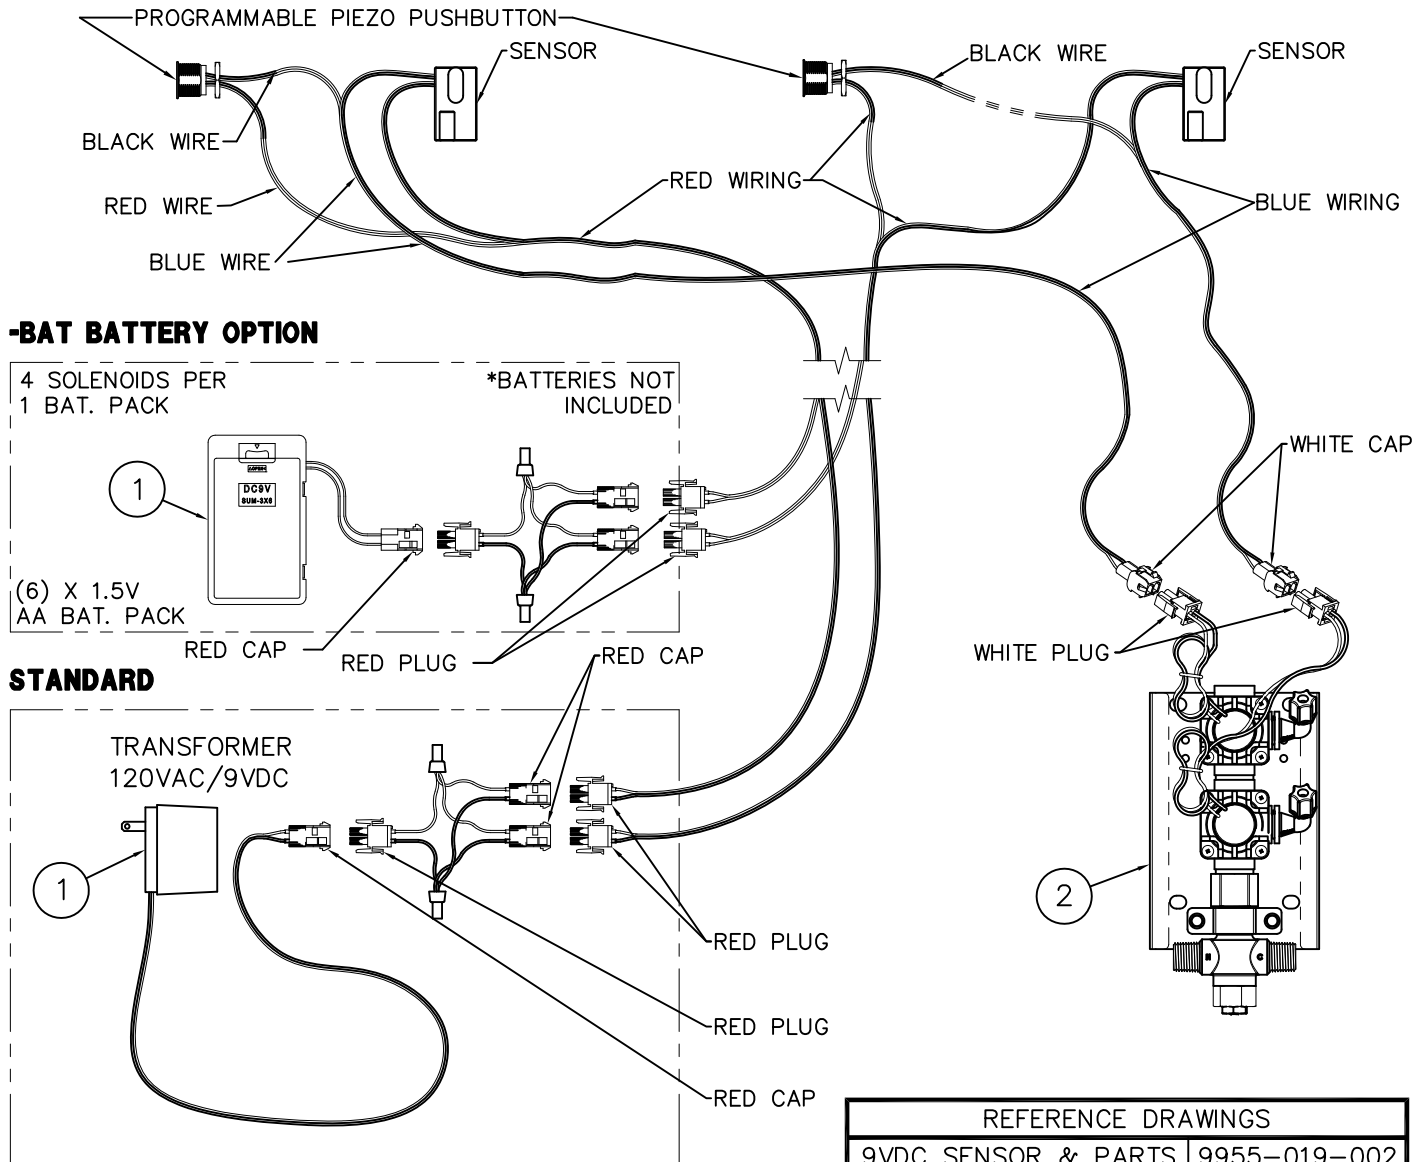

REFERENCE DRAWINGS

9VDC SENSOR & PARTS	9955-019-002
PIEZO PB PROGRAMMING	9940-009-001

INSTALLATION INSTRUCTIONS:

A- USING APPROPRIATE INSTALLATION INSTRUCTIONS, MOUNT FIXTURE TO WALL AND MAKE-UP WASTE PIPING CONNECTIONS. SENSOR OR ELECTRONIC PUSHBUTTON ARE FACTORY INSTALLED. POWER SUPPLY ① AND VALVE ② SHIPPED LOOSE.

B- INSTALL SOLENOID VALVE ASSEMBLY ② ON THE WALL (FASTENERS AND WALL ANCHORS BY OTHERS), MAKING SURE THAT THE VALVE WILL BE WITHIN BOTTOM ENCLOSURE.

C- CONNECT WATER SUPPLY (AFTER FLUSHING LINES) TO VALVE, AND VALVE RISER TO SPOUTS AS PER UNIT INSTALLATION INSTRUCTIONS.

D- CONNECT SOLENOID VALVE, POWER SUPPLY AND SENSOR WIRING AS SHOWN ON DETAIL.

E- COMPLETE THE INSTALLATION OF THE UNIT ACCORDING TO THE UNITS INSTALLATION INSTRUCTIONS.

NOTE:

1- PLUG-IN TRANSFORMER INCLUDES BUILT-IN SECONDARY FUSE. IN THE EVENT OF POWER SURGE TRANSFORMER MAY REQUIRE REPLACEMENT.

2- ELECTRICAL RECEPTACLE MUST BE WIRED TO A GFI PROTECTED CIRCUIT. FIXTURE MUST BE EARTH GROUNDED PER N.E.C. (NATIONAL ELECTRICAL CODE).



ACORN ENGINEERING COMPANY
P.O. BOX 3527 Industry, CA 91744
15125 Proctor Ave Industry, CA 91746
(626) 336-4561 FAX (626) 961-2200

TITLE

-SO SENSOR/ -PPZ PIEZO ELECTRONIC PUSHBUTTON INSTALLATION

MANUFACTURE DATE

OCTOBER 2009
TO PRESENT

DATE ISSUED

09/06/13

DATE REVISED



03/25/14

DRAWING NUMBER




9927-221-005

**A**

*BATTERIES NOT INCLUDED

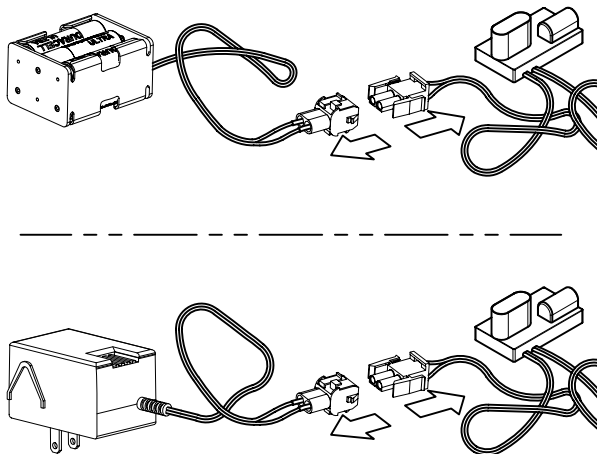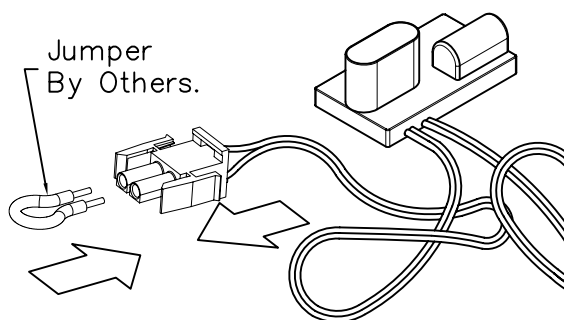**Disconnect sensor from power supply.****B**Jumper
By Others.**Short circuit sensor for 5 seconds.****C**

*BATTERIES NOT INCLUDED

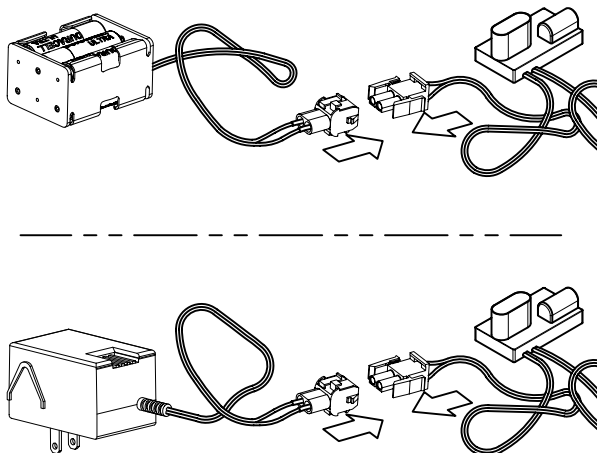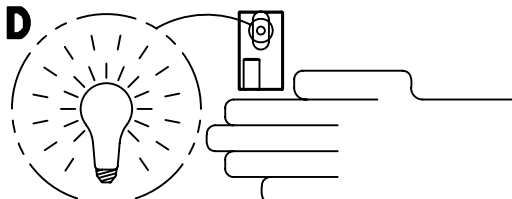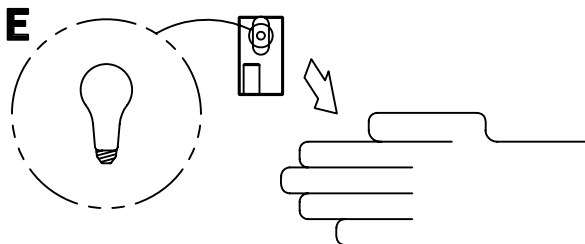**Reconnect sensor to power supply.****D****Within 5 seconds, place
hand in front of sensor.****E****Move hand to desired range.**

NOTE: THESE INSTRUCTIONS ONLY APPLY TO 9 VOLT SENSORS THAT DO NOT HAVE A RANGE ADJUSTMENT SCREW ON THE BACK. SEE DRAWING # 9927-222-001.

INSTRUCTIONS:

- A- Disconnect sensor from power supply.
- B- Create a short circuit between the positive and negative connections on the sensor for five seconds. **WARNING:** Do not create a short circuit on the power supply or while the sensor is connected to the power supply.
- C- Reconnect the sensor to the power supply.

- D- Within 5 seconds of making the connection, place hand 2 to 4 inches from the sensor.
- E- Once red light begins flashing quickly, move hand to preferred distance and wait for light to stop flashing.
- F- Check distance. If unsatisfactory, repeat steps A through E.



ACORN ENGINEERING COMPANY
P.O. BOX 3527 INDUSTRY, CA. 91744
(626) 336-4561 FAX (626) 961-2200

TITLE

9 VOLT DC SENSOR RANGE ADJUSTMENT

MANUFACTURE DATE

**SEPTEMBER, 2001
TO PRESENT**

DATE ISSUED

09/06/01

DATE REVISED

09/30/11

DRAWING NUMBER

9927-222-002

**MUST SPECIFY:**


3711 UNI-BASIN QUANTITY:	<input type="checkbox"/> -ECL	<input type="checkbox"/> -ECR
3712 DUAL-BASIN QUANTITY:	<input type="checkbox"/> -ECL	<input type="checkbox"/> -ECR
3713 TRI-BASIN QUANTITY:	<input type="checkbox"/> -ECL	<input type="checkbox"/> -ECR
3714 QUAD BASIN QUANTITY:	<input type="checkbox"/> -ECL	<input type="checkbox"/> -ECR

STANDARD WIDTHS *LESS -ECL/-ECR

3711 UNI-BASIN	19"
3712 DUAL-BASIN	49"
3713 TRI-BASIN	79"
3714 QUAD-BASIN	109"

SPECIFY EXTENDED COUNTERTOP WIDTH BELOW.

**MERIDIAN STAINLESS STEEL
DUAL-BASIN, 3702 SHOWN FOR
REFERENCE ONLY.**

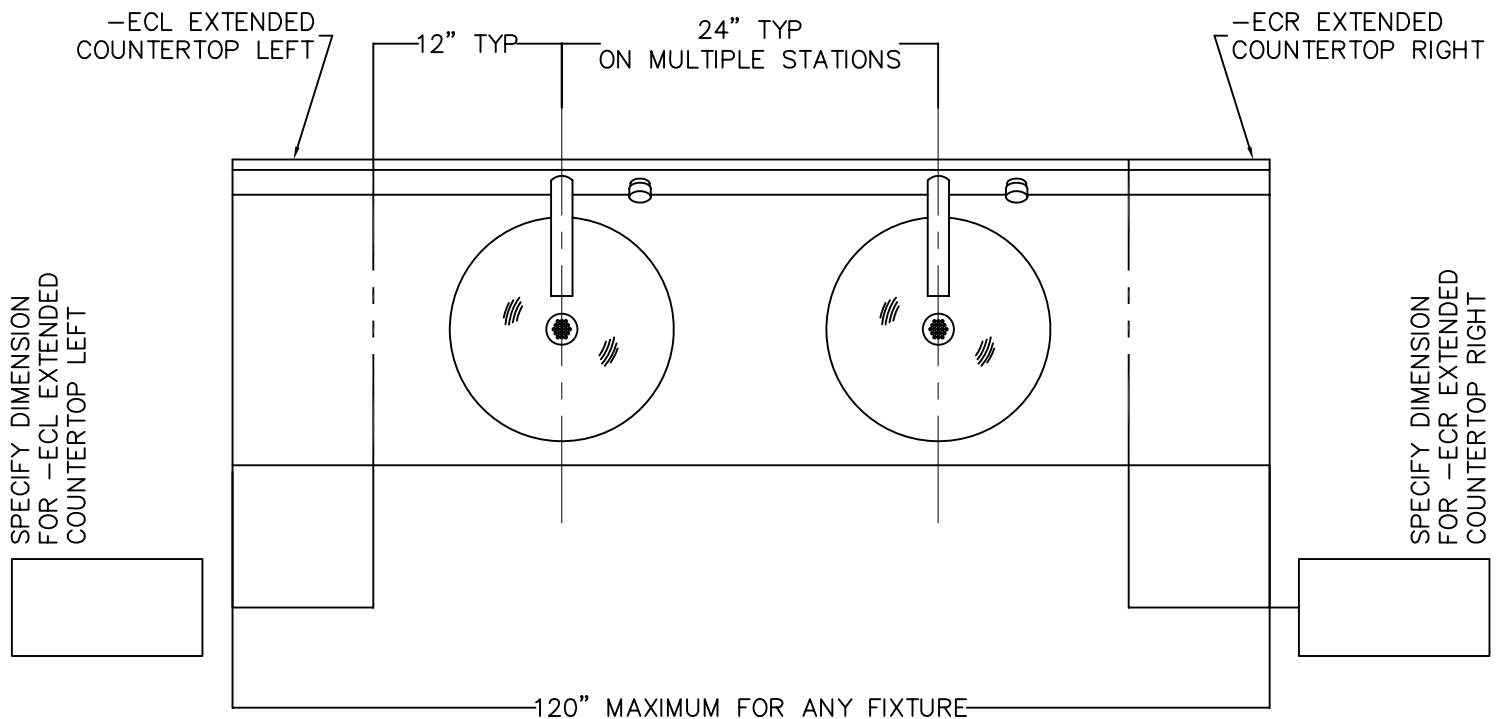**ORDERING INSTRUCTIONS:**

SPECIFY WHERE INDICATED COUNTERTOP SIDE(S) TO BE EXTENDED AND DIMENSION(S) REQUIRED. MAXIMUM OVERALL WIDTH IS 120".

NOTE: WHEN -ECL OR -ECR OPTIONS ARE SELECTED, ONLY THE COUNTERTOP IS EXTENDED; TRAP ENCLOSURES REMAIN THE SAME AS STANDARD. LENGTHS ARE SUBJECT TO FACTORY APPROVAL. ALL DIMENSIONS ARE SUBJECT TO MANUFACTURER'S TOLERANCE OF PLUS OR MINUS $\frac{1}{4}$ " WITH OVERALL TOLERANCE OF PLUS OR MINUS $\frac{1}{2}$ ".



ACORN ENGINEERING COMPANY
P.O. BOX 3527 INDUSTRY, CA. 91744
(626) 336-4561 FAX (626) 961-2200

TITLE

3710 SERIES MULTI-BASIN FIXTURES -ECL / -ECR

MANUFACTURE DATE

AUGUST 1997
TO PRESENT

DATE ISSUED

07/15/10

DATE REVISED

DRAWING NUMBER

9927-127-001



Programable Piezo Pushbutton Programming Instructions (Flow Time Adjustment)

The Button is factory set an 8 sec. timing cycle, if an 8 sec. cycle is adequate, then **no** programming adjustment is required.



NOTE: Read the entire document before trying to program the piezo pushbutton.

THE TIME SETTINGS PROGRAM USES 3 DIFFERENT TIMING MODES:

- **1 second timing mode:** Each push of the button adds 1 second to the total timing cycle.
- **5 second timing mode:** Each push of the button adds 5 seconds to the total timing cycle.
- **20 second timing mode:** Each push of the button adds 20 seconds to the total timing cycle.

To program the piezo pushbutton, you will need to be able to see the back of the piezo pushbutton.

Prevision must be made to access the back of the piezo pushbutton. There is an LED on the back of the piezo pushbutton under a layer of transparent epoxy, used as a programming indicator light.



NOTE: This programming procedure moves along rapidly, there is only about 2 or 3 seconds between programming operations.

In order to start the programming the piezo pushbutton, the button must be powered down. Disconnect the red power cable and wait 20 seconds, then reconnect the red power cable.

As soon as the cable is reconnected the LED will start flashing, it will flash 4 times, then stays on for 3 seconds. During the 3 second period, push the piezo button once, the LED will go out, now you are in the **1 sec timing mode** and each time the button is pushed the LED will flash, adding 1 sec to the total timing cycle.

To move on to the **5 sec timing mode**, pause and wait for the LED to flash 2 times, now you are in the 5 sec timing mode. Each time the button is pushed the LED will flash, adding 5 sec to the total timing cycle.

To move on to the **20 sec timing mode**, pause and wait for the LED to flash 3 times, now you are in the 20 sec timing mode and each time the button is pushed the LED will flash, adding 20 sec to the total timing cycle. After programing is complete, pause and wait for the LED to flash 4 times and then 5 times, which completes the programming.

- When a **timing mode is not required** then **do not** push the button and wait for the next timing mode.
- Each timing mode (1 sec, 5 sec or 20 sec timing mode) can be sequenced up to 100 times, that is the number of times, the button can be pushed, to increase the total timing cycle in each timing mode.



Programmable Piezo Pushbutton Programming Instructions (Flow Time Adjustment)

WORKSHEET

(FILL IN ALL BOXES, WHICH WILL SIMPLIFY THE PROGRAMMING PROCEDURE)

Fill in all the
Boxes below



Determine the
number of seconds
per timing cycle

PROGRAMING STEPS:

- Power down piezo button for 10 seconds.
- Reconnect power.
- LED flashes, then stay on.
- While the LED is steady on, push button.
- LED turns off.

1 Push = 1 Second

x 1 = sec



- You are in the 1 sec timing mode, immediately push the button, 1 push equals 1 sec added to the total timing cycle.
- Pause and wait for the LED to flash 2 times.

ADD

1 Push = 5 Seconds

x 5 = sec



- You are in the 5 sec timing mode, immediately push the button, 1 push equals 5 sec added to the total timing cycle.
- Pause and wait for the LED to flash 3 times.

ADD

1 Push = 20 Seconds

x 20 = sec



- You are in the 20 sec timing mode, immediately push the button, 1 push equals 20 sec added to the total timing cycle.

EQUALS

Total timing cycle equals

seconds



INSTALLATION, OPERATIONS & MAINTENANCE MANUAL

Please visit www.acorneng.com
for most current specifications.

